

Maker's Watch Knot LF LIEN kichijoji T-3F 2-15-6 Kichijojihon-cho Musashino-shi Tokyo 180-0004 JAPAN [Customer Service] TEL.0800-555-7010 FAX.0422-27-6848

http://knot-designs.com

■Water Resistance

- ■Water Resistance

 Mixon within is water resistant to 3 atmosphere or Satmosphere depending on watch, it means that it is a certain level of resistance to a shower, dougle of leave when waiting files and avoward under "obly file.

 Please make year that crown is pushed back correctly before use to prevent water from entering watch case.

 Please don't turn or pull out crown while your watch is submersed in water or wet to prevent water from entering watch case.

- #Repair for water damage caused by improper handling is

not covered by Knot warranty

■Lunar Inequality
When you wear Knot watch when temperature is from 5°C to 35°C, average Lunar inequality is ±20seconds

■Storage

- Please keep away from static electricity and from objects to magnetize such as electric appliance, PC, AV equipment and mobile phone. The exposure of watch to strong magnetic field may cause the
- spare parts to be magnetized and to breakdown. #Please note that removing the magnetism is not covered by
- The exposure of watch to strong magnetic field may cause the
- spare parts to be magnetizedand to breakdown.
- spare parts to be magnetizedand to breakdown.

 #Hease note that removing the magnetism is not covered by Knot warranty.

 | Flease keep away from environment under -5C or over 35°C. Exposure to the environment may cause warth function to drop or to stop.

 | Flease keep away from strong vibration.

 | Flease keep away from excessively dusty place.

- □Hease keep away from unusual emrecement such as □Hease keep away from unusual emrecement such as □Exposure to direct samilght or strong light for a long time may cause color of dall to change. Pease note that changing color of dail is not covered by Knot warranty. □Hease keep away from chemicals and chemical vapor.

■Other Precautions

- [Daily Care] ⊐Watch case and strap are attached to skin directly like clothes.
- Leaving watch dirty may cause rust and it may make sleeve dirty or cause a rash. Please keep watch clean.
- It extends long life of Case, Strap and Gasket to wipe with soft cloth when you take off watch.
- [Glass]

Strong shock may cause watch case to deform and glass to break, Please keep away from strong shock. [Metal Strap]

Please clean up metal strap such as partially washing with soap and water. You may want to use a soft toothbrush. Please be sure to cover watch case during

All leather straps are crafted of natural leather. So straps may have "wrinkle" or "crimp." Please note that these are texture of natural products, not

Please note that IP may change the color depending on your usages or storing conditions (Excessive sunlight or UV light, humid place, chemicals, etc.)

■Rash and Allergy

- If you easily get rash, you may have itch or rash. The causes of rash is considered below.
- Allerny to metal or leather

this process so as not to soak it.

- Rust, Dirt, Swat, etc. on watch main body and strap.

 In event skin has signs of rash or itch, please stop immediate use and consult a doctor.

 
Adjusting the Size of the Mesh Strap

Open the class, insert a small flathead screwdriver or similar tool into the inner slot, and lift to release the locking clip from the strap, as shown in illustration 1. Then grasp the clasp with your fingers and slide along the strap (illustration 2) to your preferred position, keeping the indentation on the back of the class aligned with one of the grooves in the back side of the mesh. Use the leverage of the screwdriver to replace the clip and lock the clasp into place (flustration 3). " Be careful not to damage the clip by using too much force or aligning it in such a way that it is not firmly seated in a groove in the mesh.



Using the Mesh Strap Clasp

- Holding the band from the 12 o'clock end bracket <A>,
 actch the hooks on the metal bar <C> inside of the clasp.
 "Note: if and <C> are not connected securely, the watch could fall off and
- Cover the metal piece <A> hooked on the bar to fix it in place by closing the
- Then flin the safety clin <D> closed from the other side to complete the







■Other precautions while wearing

■Battery Information

■Warranty Information

period or parts covered by the warranty.

About Knot original box Since the watch and strap are stored at the time of

purchase, the Knot original box is a box to be used when sending repaired items, so please keep it in a safe place. Knot We can not guarantee against breakage, breakdown

etc. occurred when sending by other than the original box. Please note.

[Warning]

Please be careful below. □When you put on and take off strap, your nail may get scratches by clasp etc.

□When you fall off or hit somebody, you might get injured by wearing watch.
□Especially when you hold infants, please keep them away from watch so as not to get injured or get rash by allergy [First battery]
Battery inside Knot watch when you purchased is a sample to check watch
function and performance. The sample battery may run out for short time after

Battery Exchange
Please take or send your watch to the store where you purchased Knot watch to change the battery. Please note that damage by the battery change or repair at unauthorized stores is not covered by Knot warranty.

If you leave run-out battery inside watch for a long time, the battery may leak

and the watch may break down. Please change the battery as soon as possible.

UNe check all internal inspection even when you request us to change battery because the malfunction may be caused by the others except battery.

exhaustion. We do internal inspection, operation inspection after the repair, and water-resistant inspection. So normally it may

take about Zweeks after we receive your request for repair. (Except Year-end and New Year holidays, GW,Summer holidays, etc.)

☐Please never make battery short, take to pieces heat or

[Please do not take out battery from watch. If you did, please keep battery out of reach of children. In event battery is swallowed immediately consult a doctor.

burn as it may explode, generate heat, and catch fire.

Battery used for Knot watch is not rechargeable. Please never recharge. If you recharge, battery may leak and be damaged.

In case that malfunction occurs under proper normal use according to this
instruction manual within one year after your purchase, we will repair or
adjust for you,free of charge.

Knot warranty covers Watch main hody (Movement, Case and Glass) Not warranty covers Watch main body (Movement, Case and Glass).

Others are not covered by Knot warranty.

□Plasse take or send the watch and this warranty to the store where you purchased when you need the repair or algust covered by Knot warranty.

□This Knot warranty is valid only in Japan.

□This Knot warranty is not reissued. Please keep it safe.

2. The below cases are not covered by Knot warranty even within warranty

period or parts covered by the warranty, (a)Improper handling, breakout or damage in carelessness, (b)Break out or damage by natural disasters such as a fire, flood damage and earthqualke. (c)Break out or damage by improper repair or alteration, (d)Change of external appearance arising from normal wear. (EX. Small scratchies of case, glass, and crown) (e)Knot warranty is not stamped with the name of the Authorized Knot

Watch Dealer or is not dated. The letters on Knot warranty are rewritten.

(f) Knot warranty is not presented.

watch could be affected by magnetic interference from cell phones, PCs, TVs, audio equipment, speakers, automatic mahjong tables or other home appliances.

This could cause it to temporarily stop, or the time to delay or advance, and may

require comprehensive inspection or internal adjustment, including demagnetizing which may not be covered by warranty.

3. We may change movement or may partially use alternative

for case, dial, hand, glass, straps etc. when repairing. This warranty guarantee charge-free repair under some conditions within the warranty period. This warranty does not limit your legal rights.

RPlease note that sample battery is not covered by Knot warranty.

folyoped Linkes

Setting the Time

 
Pull out the crown to the <2> position and turn to set the hour and minute. Push the crown back to the original

nosition to complete the setting process and return the watch to time!

[CHDONOGDADH]

Setting the Time

Pull out the crown to the <3> position and turn to set the hour and minute. Push the crown back to the original position to complete the setting process and return the watch to time!



Using Your Knot Watch

[CHRONOGRAPH]

Setting the Date Pull out the crown to the <2> position

and turn it diockwise to set the date. Push the crown back to the original position to complete the process. *Please avoid setting the date between 9 p.m. and 2 a.m., as the date change activates during these hours



Setting the Time

Pull out the crown to the <2> position and turn to set the hour and minute. Push the crown back to the original position to complete the setting process and return the watch to timekeeping mode

Zeroing the Minute and Second Hands

 Pull out the crown to the <3> position.
 Press and hold Button A for two seconds to place the minute hand in the adjust mode. The minute hand will make one rotation to the 12 o'clock position. Press Button B repeatedly until the pointer is in the <0> position.

 Press and hold Button A for two seconds to place the second hand in the adjust mode, after completing one rotation. Press Button B repeatedly until the pointer is in the <0> position

6. Complete the process by returning the crown to its original <1> position

[Two-piece Type]

Watch straps attach with easy lever-operated spring her pins, as illustrated below. The shorter piece of the band attaches to the 12 o'clock end of the watch and the longer piece to the 6 o'clock end. To attach, turn the watch and band over, and insert the end of the pin opposite the lever <1> through the band and into the watch body bracket.



Then, using your fingernal slide the lever to insert that end of the pin <2> into the bracket. Please ens the pins are seated correctly into the holes on both sides, and be careful not to scratch the watch body during installation.



[Pull-through Type] First, use the easy levers to attach the two spring bar pins to the watch body

(flustration i) Pass the tip of the starp <A> down between the pin and body on the 12 o'clock end of the case and across the back of the watch. (Illustration II) Then pass it back between the pin and body on the 6 o'clock end <C>, through





Tochigi Mesh Strap Kumihimo Strap

Place the band against the back of the watch, then use the easy levers to install both of the pins and attach the band to the watch body.



Additional easy lever nins can be purchased at our online stor (¥300 for a set of two pins)

Today's Watch on Today's Clothes

You can make fashion more enjoyable by changing bands to complement today's style or TPO, just like you select a jacket or necktie to go with your favorite shirts. By allowing you to select watches and bands independently, Knot custom ordering lets you make the most of your wrist fashion, day after day.



You can custom order through our website.

Give it a try!

http://knot-designs.com From the strap one in the membership registration will be delivered in nationwide free shipping.

Choose from a vast selection of more than 280 styles and colors of watch bands. Change them to match the season, your clothes for the day, or just to reflect the way you feel. It's fun and easy to create your own



Overseas

·Taipei Gallery Shop

·Bangkok Gallery Shop ·Hanni Gallery Shon

coordinated look!

·Taichung Gallery Shop ·Singapore Gallery Shop

·Hoshigaoka Gallery Shop

·Kichijoji Gallery Shop

·Shinsaihashi Gallen/ Shon ·Kohe Motomachi Gallery Shon

·Yokohama Motomachi Gallery Shop ·Tenjin Gallery Shop

·Kichijoji Factory Shon ·Omotesando Gallery Shon

Japan